## **OPERATIONAL CHECKLIST**



Max. wind at take-off: 12 m/s (28 mph)

PRE-FLIGHT		
1. AIRFRAME	_CONDITION	
2. WINGS		
3. PROPELLER	_CONDITION	
	SPIN FREELY	
4. RUBBER BANDS	_CONDITION	
5. PITOT TUBE	CLEAR	
6. BATTERIES (LAPTOP, DRONE, RC)_	_CHARGED	
7. CAMERA8. GROUND SENSOR	_CHECKED	
8. GROUND SENSOR	_CLEAR	
BEFORE TAKE-OFF		
1. DRONE BATTERY	_PROPERLY INSTALLED	
2. LAPTOP / TABLET BATTERY LEVEL	_CHECKED	
2. LAPTOP / TABLET BATTERY LEVEL 3. LAPTOP / TABLET SOUND	_ADJUSTED	
4. GROUND MODEM	_PROPERLY POSITIONED	
5. START WAYPOINT	_SET I	
6. HOME WAYPOINTS	_SUITABLE	
7. WORKING AREA	_SET I	
8. WIND DIRECTION & SPEED	_CHECKED	
9. AREA & AIRSPACE	_CLEAR I	
DURING FLIGHT		
1. EMOTION STATUS PANEL	_MONITORED	
2. AIRTRAFFIC & OBSTACLES	_STAY CLEAR	
3. WEATHER	_MONITORED	
BEFORE LANDING		
1. WIND	_CHECKED I	
2. LANDING POINT & SECTOR	_SET I	
FINAL		
1. APPROACH	_CLEAR I	
2. ABORT BUTTON	_USE IF NEEDED	
AFTER LANDING		
1. BATTERY	DISCONNECTED	
2. AIRFRAME	_CONDITION I	
3. FLIGHT DATA	_QUALITY CHECKED	
4. FLIGHT LOGBOOK	_RECORD AS REQUIRED	



**COMPLETE DESCRIPTION: REFER TO USER MANUAL** 



## senseFly

IN-FLIGHT EMERGENCY ACTIONS  1. UNSTABLE FLIGHT  2. AIR TRAFFIC  3. ALTITUDE/LOCATION UNRELIABLE  4. UNEXPECTED GROUND PROXIMITY DETECTED	GO LAND / LAND NOW 3X HOLD OR MOVE AWAY GO LAND / LAND NOW 3X  CHECK DRONE ALTITUDE CHECK FLIGHT PARAMETERS DISABLE GROUND SENSOR FOR FLIGHT AND LANDING
DRONE LOSS  1. EMOTION  2. LAST POSITION  3. WHILE SEARCHING  4. IN CASE OF DAMAGE / CASUALTIES	



